

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

Function

1. Carry out an operational test to ensure the pump mechanism moves smoothly.
2. Turn handlebar and grip to ensure they move smoothly.
3. Check the sprayhead inside the handlebar for proper operation and clean if necessary.
4. Ensure that cranks and pedals are securely connected and check for proper operation.
5. Check saddle for wear and tear and ensure it is securely connected.

Water supply

 
 
6. Check hoses for wear and tear, replace if necessary after removing the service lid (located on the side) and the crank.
7. Check water supply for wear and tear, and clean the suction filter if necessary.

Structural stability

8. Check anchoring to the ground once a year, retighten screws and bolts if necessary.

Note

Prior to the start of the frost period, turn off water supply and drain the lines, dismantle the pedal pump and drain the water container if necessary. If the pedal pump has been removed, you can close the opening using the included winter lid.

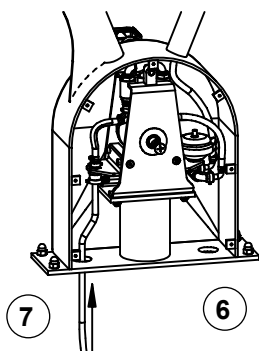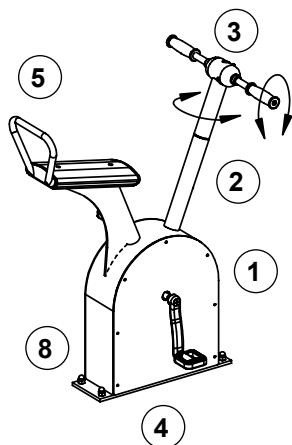

Repair not carried out, it is still possible to play on equipment

**Repair not carried out,
equipment is taken out of action**

**All work carried out,
everything is in order**

 
Maintenance carried out by:

..... Date

Special notes, e.g. for repairs

For spare parts refer to next page.

Spare parts
Pedal Pump
Order No. 5.18130

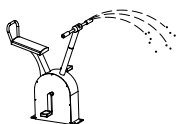

Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

Order No.	Spare parts
0.97890	Winter lid