For spare parts refer to back of page.

This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground..... 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check that all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. **Recommendation**: apply wood preservative wax (www.complex-farben.com) once a year. Intervals for maintenance work and checks generally depend on Triangles - the location - the usage 4. If a triangle is missing (vandalism), attach - the frequency of use replacement triangle - possible vandalism **Beaters** For more details see also "General instructions for maintenance of Check for wear and tear. playgrounds". Check that beaters are securely connected. **Triangle** If necessary, disentangle suspension cables; Order No. 10.52000 if a beater is missing (vandalism) install a replacement beater. Structural stability In order to check that the equipment is securely fastened to the ground, uncover the foundations once a year. Special notes, e.g. for repairs Repair not carried out, it is still possible to play on equipment Repair not carried out, Equipment is taken out of action All work carried out, everything is in order Maintenance carried out by:

..... Date

Spare Parts for Triangle Order No. 10.52000



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to

only use original parts.

	Fi.	
Order No.	Spare part	
10.99909	beater with stainless steel cable	
~		