Instructions for wear checks of play equipment	ор	The equipment must be checked for correct operation and safety, especially the points listed below:		Proof of maintenance	
Playground		Hammock			
Date of installation	1.	Check the connection to the stand posts and retighten if necessary.			
Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.	2.	Check plastic sleeves of rope and net elements for wear; replace any elements whose inner steel strands are damaged.			
Intervals for maintenance work and checks generally depend on	3.	Check the connections of rope and net elements for damage and ensure they are tight, retighten if necessary.			
 the location the usage the frequency of use 		Wooden parts			
 possible vandalism For more details see also "General instructions for maintenance of playgrounds". 	4.	Check for rot and, if necessary, smooth out splinters and round off sharp edges and cracks.			
	5.	Check all bolts and screws are tight and retighten if necessary.			
Hammock red Order No. 6.44000/ R6.44000/6.44001 Hammock natural coloured		Rubber bumpers			
	6.	Check rubber plates for wear and tear and ensure they are tight, replace them if necessary.			
Order No. 6.44010		Structural stability			
	7.	Uncover the foundation once a year in order to check for rot or the steel feet for corrosion.			
6		Attention! Strictly adhere to the maintenance intervals!		Special notes, e.g. for repairs	
-		pair not carried out, s still possible to play on equipment			
		Repair not carried out, equipment is taken out of action All work carried out, everything is in order			
	Maintenance carried out by:				
Date					

COPYRIGHT © RICHTER SPIELGERÄTE GMBH