This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. 2. Recommendation: apply paraffin wax to the Any equipment with moving parts must upper end grain areas once a year, please be checked at least twice a year, static refer to Order No. 0.90100, 1 litre. equipment at least once a year. Ropes Intervals for maintenance work and checks generally depend on 3. Check ropes for wear and tear, if the steel reinforcement is damaged it is imperative it - location be replaced. - kind of use - frequency of use 4. Check chain connections and swages are - possible vandalism tight (see detailed diagram). For more details see also "General Structural stability instructions for maintenance of playgrounds". 5. In order to check for rot at wooden parts or steel feet for corrosion. uncover the Climbing Ropes foundations once a year. basic element Order No. L6.51820 3 Special notes, e.g. for repairs detailed diagram Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action All work carried out, everything is in order Maintenance carried out by: For spare parts refer to back of page. Date

Spare parts Climbing Ropes basic element Order No. L6.51820		Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to only use original parts .
Order No.	Spare part	
0.92187 0.92188 0.99405	Holding rope with chain attachment Running rope with chain attachment Disc for chain suspension	