This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for correct operation and safety, especially the points checks of play equipment listed below: **Ropes and Nets** Playground..... 1. Ensure that rope and net elements are securely Date of installation connected and check connection points for damage; retighten screws/bolts if necessary. Checks depend on the type of equipment. Any equipment with moving parts must 2. Check plastic sleeves of the rope and net be checked at least twice a year, static elements for wear and tear; replace any equipment equipment at least once a year. elements whose inner steel strands are Intervals for maintenance work and checks damaged. generally depend on Attention - location Strictly adhere to the - usage maintenance intervals! - frequency of use - possible vandalism For more details see also "General instructions for maintenance of Wooden parts playgrounds". 3. Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks. **Spider Net** Order No. 7.84010 4. Check that all bolts and screws are tight and retighten if necessary. 5. Recommendation: apply paraffin wax to the upper end grain areas once a year, please refer to order No. 0.90100, 1 litre. Structural stability 6. In order to check the steel feet for corrosion, uncover the foundation once a year. Metal/fittings 7. Developed sharp edges file stub. Make sure that the joints and swivels move 8. smoothly, apply grease if required. Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action All work carried out, everything is in order Maintenance carried out by:

Proof of maintenance

Special notes, e.g. for repairs

22.10.202

En-EN

..... Date