

Instructions for wear checks of play equipment

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

Playground.....

Date of installation


Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.

Intervals for maintenance work and checks generally depend on

- the location
- the usage
- the frequency of use
- possible vandalism

For more details see also "General instructions for maintenance of playgrounds".

Dance Chimes
Order No. 9.06000/9.06102/9.06106

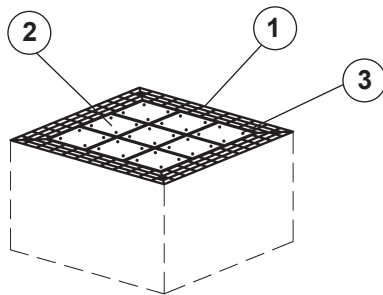

Cleaning

1. In order to clean the inside remove the step grates and remove leaves or dirt (if necessary, use big suction machine).
2. If necessary, you can clean the inside of the individual sound elements by removing the respective floor plate.
3. Check that screws/bolts are tight and retighten if necessary.

Operation

4. If the equipment is worn heavily, send in for general overhaul. Please ask for costs if required.

Special notes, e.g. for repairs

Repair not carried out, it is still possible to play on equipment

Repair not carried out, equipment is taken out of action

All work carried out, everything is in order

Maintenance carried out by:

..... Date