Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance	
Playground Date of installation Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year. Intervals for maintenance work and checks generally depend on - location - usage - frequency of use - possible vandalism For more details see also our general instructions for maintenance of playgrounds! See-saw Pump for connection to pressure line Order No. 5.18600 for water supply from a pond or similar Order No. 5.18700 or with one-sided outlet, flush with the ground Order No. 5.18750	 See-Saw Pump Prior to the start of the frost period, disconnect from the water mains and pump until the equipment is drained completely: 1. Remove lid from see-saw platform and unscrew drainage plug from the water reservoir. 2. Loosen top bolt on the piston rod of the pump piston and leave the piston in the cylinder (loosely). 3. Open drainage valve (provided on site) on the jet pipe. Screw on lid again. 		Special notes, e.g. for repairs
	Repair not carried out, it is still possible to play on equipment		
	Repair not carried out, equipment is taken out of action		
	All work carried out, everything is in order		
	Maintenance carried out by: Date		

Spare parts See-saw Pump Order No. 5.18600 / 5.18700 / 5.18750		Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to only use original parts.		
Order No	. Spare parts	Order No.	Spare parts	
0.57100	Rubber puffer	0.57155	Piston shaft	
0.57110	Shock absorber	0.57160	Plug	
0.57120	Non-return valve	0.97804	Float valve	
0.57130	Cylinder		~	
0.57140	Piston			
0.57142	1 Set (= 2 pieces) O-Rings for piston			
0.57143	1 Set (= 2 pieces) Grooved Rings			
0.57150	Piston rod			