Instructions for wear checks of play equipment

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

Date of installation


Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.

Intervals for maintenance work and checks generally depend on

- location
- kind of use
- frequency of use
- possible vandalism

For more details see also "General instructions for maintenance of playgrounds".

End frame for ramp with Ladder Order No. 3.66388

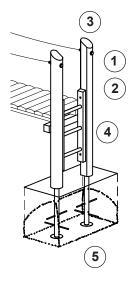

Wooden parts

- 1. Check for rot and, if necessary, smooth splinters and sharp edges for cracks.
- 2. Check that all bolts and screws are tight and retighten if necessary.
- 3. Recommendation: apply paraffin wax to the upper end grain areas once a year, please refer to Order No. 0.90100, 1 litre.
- 4. Check the ash wood rungs of the ladder for wear and tear, the remaining diameter must be at least 30 mm.

Structural stability

5. In order to check the steel feet for corrosion, uncover the foundation once a year.

Special notes, e.g. for repairs

- Repair not carried out, it is still possible to play on equipment
- Repair not carried out, equipment is taken out of action

All work carried out, everything is in order

Maintenance carried out by:

	_	4	_
	2	ш	0